## **Release Liner Winder Installation instructions**

For installation of the release liner winder on a machine supplied from the factory:

- 1. Remove Release liner winder brackets and hardware from their packing
- 2. On the bracket you will see two large holes, install the bracket as shown in the picture with the slot facing to the center of the laminator and the large hole over the shoulder of the screw.



3. Using the #10 flat head screw install the screw through the tapered hole in the bracket and screw into position #8. Make sure that the bracket sits flat and flush against the panel and tighten securely.



- 4. Repeat for the other side.
- 5. The liner winder tube assembly should slide freely into the slots on the machine and lay against the rear laminating roller so that it is driven by friction off of the rear roller. The release liner will then be attached to this tube and wrapped as the machine is in operation. (you might use an old film core over the tube to simplify removal) see your operators manual for operating and film threading instructions.

